## R. C. Tronics Incorporated

2573 East Kercher Road Goshen, Indiana 46528 Toll Free 1-866-457-7790 Phone 1-574-642-3857 Fax 1-574-642-3858 http://www.rctronics.com

## Police Vehicle Power Center RCT-01233-00000

+12 VDC, Size Conductor For Total Connected Load

J1 Header Supports all standard switch panels RCT-01276, RCT-01277 & RCT-01279

RCT-01295, RCT-01296 & RCT-01297

9 Position Dip-Switch Permitts Rly-1 thru Rly-10 to become progressively energized. (Rly-1 will remain on when Rly-2 is energised, ect.)

Rly-01 thru Rly-10 are energised via J1 header located on Power Center, Rly-01 or by a positive or negative signal via two pin header located by each relay. **Rly-02** 

J1 heder interfaces with all six standard switch-Rly-03 panels, with gun lock safety interface.

**Rly-04** 

Each relay is fuse or circuit breaker protected up to a maxim of 30 ampere.

Rly-05

Ignition Power, each output 1-1 may be fused to 30 ampere **I-2** Total current may not exceed **I-3** 30 ampere.

F23

Three isolated fuses, maxim 30 ampere.

F24 F25

**Rly-10** 

Each fuse is monitored with a red led to depict Rly-09 an open circuit.

Fuse can be removed and Rly-08 a ground may be placed so a ground may be

output. Rly-07

Rly-06

1-4 Ignition Power, each output may be fused to 30 ampere 1-5 Total current may not exceed

1-6 30 ampere.

F26

Three isolated fuses, maxim F27 30 ampere.

F28

**Size Main Conductor** 

For Maxim Connected Load

**Battery Negative** 

F-20, F21 & F22 - 30 ampere maxim each

F-17, F18 & F19 - 30 ampere maxim each