



# R. C. Tronics Incorporated

2573 East Kercher Road  
Goshen, Indiana 46528  
Toll Free 1-866-457-7790

Phone 1-574-642-3857  
Fax 1-574-642-3858  
<http://www.rctronics.com>

## RCT-01727-A


### SCHOOL BUS ELECTRONIC AMBER & RED WARNING CONTROLLER WITH WARNING LIGHT CURRENT MONITOR.

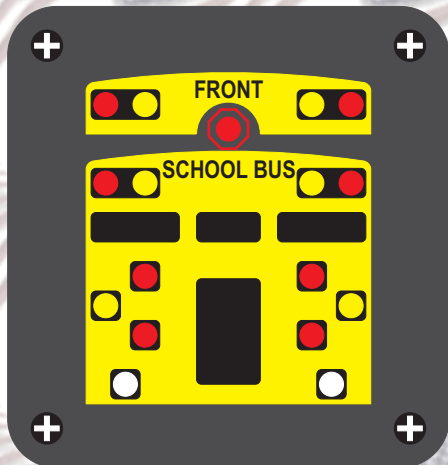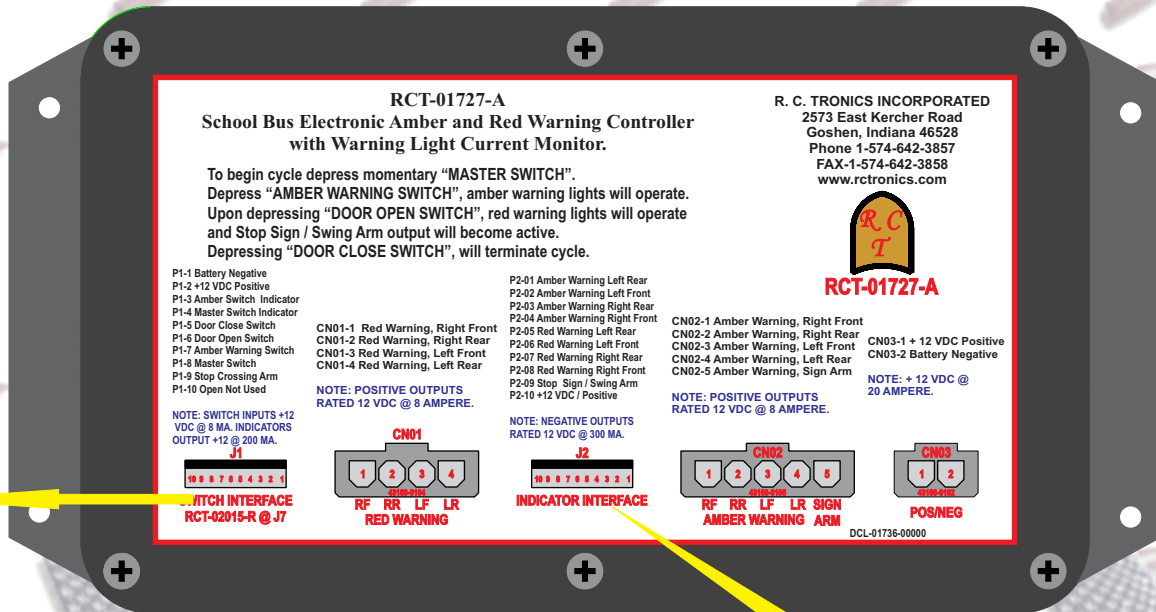

RCT-01729-00000 Indicator Panel,  
Use With RCT-01727-A Only.



To Monitor Brake, Turn and Back-Up lights requires RCT-01725 and Indicator Panel RCT-01729-00001.

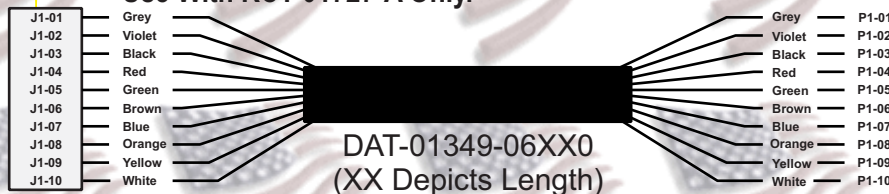

#### Sequence of Operation:

- Momentarily depressing, "MASTER" switch will arm system.
- Momentarily depressing, "AMBER WARN" switch will begin operating of the amber warning lights.
- Momentarily inputting to P1-6, "DOOR OPEN" will switch to red warning lights from amber warning lights and output +12 VDC @ CN02-5, "SIGN ARM"
- Momentarily inputting to P1-5, "DOOR CLOSE" will terminate cycle.

