

Phone 1-574-642-3857
Fax 1-574-642-3858
<http://www.rctronics.com>

The diagram illustrates the control panel for the Mallory MSR320S, featuring a variety of switches and buttons. The panel is organized into several functional sections:

- Door Section:** Includes switches SW1, SW2, and SW3, and buttons D10, D11, and D12. A label "DOOR" is present.
- Dome Section:** Includes switches SW4, SW5, and SW6, and buttons D13, D14, and D15. A label "DOME" is present.
- Video Section:** Includes switches SW7, SW8, and SW9, and buttons D16, D17, and D18. A label "VIDEO" is present.
- Reading Section:** Includes switches SW10, SW11, and SW12, and buttons D19, D20, and D21. A label "READING" is present.
- Mirror HT Section:** Includes switches SW13, SW14, and SW15, and buttons D22, D23, and D24. A label "MIRROR HT" is present.
- Heater Section:** Includes switches SW16, SW17, and SW18, and buttons D25, D26, and D27. A label "HEATER" is present.
- Lift SW Section:** Includes switches SW19, SW20, and SW21, and buttons D28, D29, and D30. A label "LIFT SW" is present.

A central label reads "MALLORY MSR320S". A handwritten note "R C T 01777" is visible in the bottom right corner.