

R. C. Tronics Incorporated

2573 East Kercher Road
Goshen, Indiana 46528
Toll Free 1-866-457-7790

RCT-01990-0__00

Phone 1-574-642-3857
Fax 1-574-642-3858
<http://www.rctronics.com>

The main control panel features a grid of indicator lights and two gauges. The lights are arranged in three rows:

- Row 1:** BATTERY (Green), EMERGENCY MASTER (Red, ON), PRIMARY (OFF), LIGHTBAR FRONT (ON), SIREN HORN (ON), LIGHTBAR REAR (ON), WIG-WAG (ON), STROBE (ON).
- Row 2:** LOW VOLTAGE (Red), EMERG. MASTER (Blue), CODE RED (Red), MODULE MASTER (Red, ON), RIGHT REAR DOME LIGHT (ON), LEFT FLOOD (ON), RIGHT FLOOD (ON), REAR FLOOD (ON), CANCEL LOW VOLT. (Backup, ON), FOG LIGHT FRONT (ON).
- Row 3:** DOOR OPEN (Red), CODE AMBER (Yellow), COMPT. OPEN (Yellow), CODE GREEN (Green), REAR DOME LIGHT (ON), LEFT FLOOD (ON), RIGHT FLOOD (ON), REAR FLOOD (ON), BACK UP ALARM (ON), FOG LIGHTS (ON).

Each light has a corresponding label and part number below it. To the right of the lights are two gauges: a D.C. AMPERES HOYT gauge (0-200) and a D.C. VOLTAGE HOYT gauge (8-16).

RCT-00660-0000
Voltmeter

RCT-00659-0000
Ammeter

FAC-01990-00000

Add 0 ohm when
SIREN/HORN (SW. 4)
is MAINTAINED

Connects to PCB-00745/J1 from PCB-00747.

Operates: "Emergency Master Light, Door Open Light and Compartment Open Light."
Also Connects to stand alone, "Battery and Low Voltage Light."

